

mobile accessories

Wireless ADSL2+ Router

ML0512

User's manual EN

Instrukcja obsługi PL

Package content

- one wireless ADSL2+ modem router
- one power adapter
- one RJ45 cable
- two RJ11 cables
- quick installation guide

LED status description

Indicator	Status	Description
Power	OFF	No power
	ON	Power supplied
WLAN	ON	WLAN is OK
	Blink	WLAN data transferring
Internet	Blink	ADSL data transferring
LAN	ON	Ethernet connection is OK
	Blink	Ethernet data transferring
ADSL	Quick Blink	ADSL line is training
	ON	ADSL line is connected

1. Configuring The PC

To Windows XP as a example.

1.1 Go to Start / Control Panel (in Classic View). In the Control Panel, double-click on Network Connections.



- 1.2 Double-click Local Area Connection.
- 1.3 In the Local Area Connection Status window, click Properties.

Support	
Status	Contraction
Duration:	00:19:32
Speed:	100.0 Mbps
Activity	Sent — 🗭 — Received
Packets:	27 0
Properties	Disable

1.4 Select Internet Protocol (TCP/IP) and click Properties.

🕂 Local Area Connection Properties 🛛 🔹 💽
General Authentication Advanced
Connect using:
B ASUSTeK/Broadcom 440x 10/* 00 Integrated Controller
Configure
This connection uses the following items:
Client for Microsoft Networks Grief and Printer Sharing for Microsoft Networks GoS Packet Scheduler File and Printer Protocol (TCP/IP)
Install Uninstall Properties
Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.
Show icon in notification area when connected
OK Cancel

1.5 Select the Obtain an IP address automatically and the Obtain DNS server address automatically radio buttons.

1.6 Click OK to finish the configuration.

Internet	Protocol (TCP/IP)	Properties 🔹 🥐 🔀
General	Alternate Configuration	1
You car this cap the app	n get IP settings assigne bability. Otherwise, you n ropriate IP settings.	ed automatically if your network supports need to ask your network administrator for
⊙ 01	otain an IP address auto	matically
OU:	se the following IP addre	
IP ac	ddress:	
Subr	net mask:	
Defa	ult gateway:	
⊙ 01	otain DNS server addres	ss automatically
OU:	se the following DNS se	rver addresses:
Prefe	erred DNS server:	
Allen	nate DNS server:	
		Advanced
		OK Cancel

2. Configuring with your Web Browser

Open your web browser, enter the IP address of your router, which by default is 192.168.1.1, and click "Go", a user name and password prompt window will appear. The default username and password are "admin" and "admin" respectively.

Connect to 192	2.168.1.1 🛛 🛛 🔀
	GR
GoAhead	
<u>U</u> ser name:	🛃 admin 🕑
Password:	••••
	Remember my password
	OK Cancel

Congratulation! You are now successfully logged in to the ADSL2+ Router!

3. Quick Start

							ADSL Router
Quick Start	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
Quick Start							
	Thi 'Ou (Int	is ADSL Router lick Start' wizz ternet Service	r is ideal for hon ard will guide you Provider).	ne networking and s I to configure the A	small business netv DSL router to conne	vorking. The ect to your ISP	,
			RUNWZAR	D			

For detailed instructions on configuring WAN settings, see the Interface Setup section of this manual.

The Quick Start Wizard is a useful and easy utility to help setup the device to connect to your ISP (Internet Service Provider) with only a few steps required. It will guide you step by step to configure the password, time zone, and WAN settings of your device. The Quick Start Wizard is a helpful guide for first time users to the device.



Step1. Set your new password.

Quick Start - Password	
You may change the admin account password by entering to continue.	in a new password. Click NEXT
New Password :	
Confirmed Password :	
	BACK NEXT EXIT

Step2: Choose your time zone.

Quick Start - Time Zone Select the appropriate time zone for your location and click NEXT to continue.
(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London
BACK NEXT EXIT

Step3: Set your Internet connection.

Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click NEXT to continue.

O Dynamic IP Address	Choose this option to obtain a IP address automatically from your ISP.
Static IP Address	Choose this option to set static IP information provided to you by your ISP.
● PPPoE/PPPoA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
O Bridge Mode	Choose this option if your ISP uses Bridge Mode.

BACK NEXT EXIT

Quick Start - PPPoE/PPF	'oA		•
Enter the PPPoE/PPPoA informs	ition provided to you by your ISP.	Click NEXT to continue.	
Username:	username		
Password:	•••••		
VPI:	0 (0~255)		
VCI:	33 (1~65535)		Ε
Connection Type:	PPPoE LLC		
		BACK NEXT EXIT	

Step4: Wireless network configuration.

Quick Start - Wlan	
You may enable/disable Wan,	change the Wan SSID and Authentication type in this page.
Access Point :	 Activated O Deactivated
SSID :	JCG012345
Broadcast SSID :	⊙ Yes ◯ No
Authentication Type :	Disabled
	BACK NEXT EXIT

Step5: Save settings of this ADSL Router.

Quick S	Start Complete !!	
The to s	e Setup Wizard has completed. Click on BACK to modify changes or mistakes. C save the current settings.	lick NEXT
	BACK NEXT	EXIT

Quick Start Completed !!

Saved Changes.

CLOSE

Troubleshooting

If the ADSL2+ Router is not functioning properly, you can refer first to this chapter for simple troubleshooting before contacting your service provider. This could save your time and effort but if the symptoms persist, then consult your service provider.

(1) Problems starting up the router

Problem

None of the LEDs are on when you turn on the router.

Corrective Action

Check the connection between the adapter and the router. If the error persists, you may have a hardware problem. In this case you should contact technical support. Problem

You have forgotten your router login name and / or password.

Corrective Action

Try the default username "admin" and password "admin". If this fails, you can restore your router to its factory settings by holding the Reset button on the back of your router

(2) Problems with the WAN Interface

Problem

Initialization of the PVC connection ("linesync") failed.

Corrective Action

Ensure that the telephone cable is connected properly from the ADSL port to the wall jack. The ADSL LED on the front panel of the router should be on. Check that VPI, VCI, encapsulation type and type of multiplexing settings are the same as those provided by your ISP. Reboot the router GE. If you still have problems, you may need to verify these settings with your ISP.

Frequent loss of ADSL linesync (disconnections).

Ensure that all other devices connected to the same telephone line as your router (e.g. telephones, fax machines, analogue modems) have a line filter connected between them and the wall socket (unless you are using a Central Splitter or Central Filter installed by a qualified and licensed electrician), and ensure that all line filters are correctly installed and the right way around. Missing line filters or line filters installed the wrong way around can cause problem with your ADSL connection, including causing frequent disconnections.

(3) Problems with the LAN Interface

Can't ping any PCs on the LAN.

Check the Ethernet LEDs on the front panel. The LED should be on for a port that has a PC connected. If it is off, check the cables between your router and the PC. Make sure you have uninstalled any software firewall for troubleshooting.

Verify that the IP address and the subnet mask are consistent between the router and the workstations.

Specifications are subject to change without notice.

"The Lechpol company declares that product ML0512 is consistent with the essential requirements and other relevant provisions of directive 1999/5/EC. The proper declaration for download from www.lechpol.eu"

English



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and othor European countries with separate collection systems) This marking shown on the product or Its literature, indicates that It should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract This product should not be mixed with other commercial wastes for disposal

Made in China for LECHPOL Zbigniew Leszek, Miętne, 1 Garwolińska Street 08-400 Garwolin.



Zawartość opakowania

- router ADSL2+
- zasilacz
- kabel RJ45
- dwa kable RJ11
- instrukcja obsługi

Diody informacyjne LED

Dioda	Status	Opis
Power	WYŁ.	Brak zasilania
	WŁ.	Router włączony
WLAN	WŁ.	OK (WLAN)
	Miga	Transfer danych (WLAN)
Internet	Miga	Transfer danych (ADSL)
LAN	WŁ.	Połączenie Ethernet OK
	Miga	Transfer danych (Ethernet)
ADSL	Miga szybko	Status ADSL - próba nazwiązania połączenia
	WŁ.	Status ADSL - połączono

1. Konfiguracja komputera

Przykład konfiguracji komputera z systemem Windows XP.

1.1 Należy wybrać Start -> Ustawienia -> Panel sterowania i dwukrotnie kliknąć opcję Połączenia sieciowe.



- 1.2 Należy dwukrotnie kliknąć opcję Połączenie lokalne.
- 1.3 Następnie należy wybrać Właściwości.

Stan:	Połączenie	lokalne 2	?
)gólne	Obsługa		
Połą	czenie		
Sta	n:		Połączono
Cza	is trwania:		04:55:51
Szy	bkość:		1,0 Gb/s
Akty	wność W	ystano — 🛐	Odebrano
Pak	tiety:	34 659	41 070
Właś	iciwości	Wyłącz	
			Zam

1.4 Na liście ustawień należy wyszukać i dwukrotnie kliknąć na **Protokół internetowy** (TCP/IP).

^p ołącz używając:		
🕮 NVIDIA nFor	ce 10/100/1000 Mbps	Konfiguruj
'o połączenie wyk	orzystuje następujące skład	lniki:
System Ne	etBIOS NWLink	
Protokor t	ransportowy zgodny z NWL nternetowy (TCP/IP)	
<	iii	
Zainstalui	Odinstalui	Waściwości
Zainstaluj	Odinstaluj	Właściwości
Zainstaluj Opis Protokół kontroli Domyślny protok komunikację poł	Odinstaluj itransmisji/Protokół internet ół dla sieci rozległych, umo rączonych sieci różnych typ	Właściwości owy (TCP/IP). źliwiający ów.

1.5 Należy ustawić opcję Uzyskaj adres IP automatycznie oraz Uzyskaj adres serwera DNS automatycznie.

1.6 Po wprowadzeniu ustawień, należy nacisnąć przycisk OK.

Właściwości: Protokół internetow	лу (ТСРЛР) 🛛 🛛 🔀			
Ogólne Konfiguracja alternatywna				
Przy odpowiedniej konfiguracji sieci możesz automatycznie uzyskać niezbędne ustawienia protokołu IP. W przeciwnym wypadku musisz uzyskać ustawienia protokołu IP od administratora sieci.				
💿 Uzyskaj adres IP automatycznie				
🔿 Użyj następującego adresu IP: —				
Adres IP:				
Maska podsieci:				
Brama domyślna:				
 Uzyskaj adres serwera DNS autor 	natycznie			
🔿 Użyj następujących adresów serw	erów DNS:			
Preferowany serwer DNS:				
Alternatywny serwer DNS:				
	Zaawansowane			
	OK Anuluj			

2. Połączenie z routerem

W pasku adresu przeglądarki internetowej należy wpisać adres IP routera: **192.168.1.1** i nacisnąć **Enter**. Następnie należy wprowadzić nazwę użytkownika **admin**, hasło **admin** i kliknąć **OK**.

Connect to 192	2.168.1.1 ? 🛛
	GR
GoAhead	
<u>U</u> ser name:	🛃 admin 💌
Password:	••••
	Remember my password
	OK Cancel

3. Szybki start

							ADSL Router
Quick Start	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
Quick Start							
	Thi 'Qu (Int	is ADSL Routei lick Start' wizz ternet Service	r is ideal for hon ard will guide you Provider).	ne networking and s I to configure the A	small business netv DSL router to conne	vorking. The ect to your ISP	,
			RUNWIZAR				

Kreator Szybki start (Quick start), jest to użyteczne i łatwe narzędzie do podstawowej konfiguracji urządzenia. Kreator krok po kroku umożliwi skonfigurowanie hasła, strefy czasowej, ustawień połączenia internetowego oraz sieci Wi-Fi. Aby rozpocząć pracę kreatora należy wybrać zakładkę **Quick Start** i kliknąć **Run Wizard**.



Krok 1. Ustawienie hasła	dostępu	do routera.
--------------------------	---------	-------------

Quick Start - Password	
You may change the admin account password by entering in a new password. Click to continue.	NEXT
New Password :	
Confirmed Password :	
BACK NEXT EX	T

Krok 2: Ustawienie strefy czasowej.

Quick Start - Time Zone
Select the appropriate time zone for your location and click NEXT to continue.
(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London
BACK NEXT EXIT

Krok 3: Ustawienie połączenia internetowego.

Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click NEXT to continue.

O Dynamic IP Address	Choose this option to obtain a IP address automatically from your ISP.
Static IP Address	Choose this option to set static IP information provided to you by your ISP.
PPPOE/PPPoA	Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
O Bridge Mode	Choose this option if your ISP uses Bridge Mode.

BACK NEXT EXIT

Quick Start - PPPoE/PPF	°оА	
Enter the PPPoE/PPPoA information	ation provided to you by your IS	P. Click NEXT to continue.
Username:	username	
Password:	•••••	
VPI:	0 (0~255)	
VCI:	33 (1~65535)	
Connection Type:	PPPoE LLC	
		L
		BACK NEXT EXIT

Krok 4: Ustawienia sieci Wi-Fi.

Quick Start - Wlan	
You may enable/disable Wlan,	change the Wan SSID and Authentication type in this page.
Access Point :	Activated O Deactivated
SSID :	JCG012345
Broadcast SSID :	Yes ○ No No
Authentication Type :	Disabled
	BACK NEXT EXIT

Krok 5: Zapisanie ustawień.

Quick Start Complete !!	
The Setup Wizard has completed. Click on BACK to modify changes or mistakes. Click NEXT to save the current settings.	
	BACK NEXT EXIT



Saved Changes.

Rozwiązywanie problemów

W tym rozdziale opisane zostały najczęściej występujące problemy i ich rozwiązania. Jeżeli po sprawdzeniu poniższych informacji router nadal nie działa prawidłowo, należy skontaktować się z lokalnym sprzedawcą lub serwisem urządzenia.

(1) Problemy z uruchomieniem routera

Nie świeci się żadna dioda na routerze.

Należy sprawdzić podłączenie routera do zasilania. Należy sprawdzić włącznik zasilania na tylnym panelu routera.

Problem z zalogowaniem się do routera (błędny login, hasło).

Należy spróbować zalogować się na standardowych ustawieniach: **admin**, **admin**. Jeżeli standardowe ustawienia nie działają, należy zrobić reset konfiguracji urządzenia poprzez naciśnięcie przycisku reset na tylnym panelu routera. (Uwaga: naciśnięcie przycisku reset spowoduje skasowanie wszystkich wprowadzonych ustawień).

(2) Problemy z podłączeniem do internetu

Zainicjowanie połączenia PVC nie powiodło się.

Należy sprawdzić połączenie kabla telefonicznego. Należy sprawdzić, czy wszystkie inne urządzenia podłączone do linii telefonicznej poprzedzone są filtrem ADSL. Należy sprawdzić ustawienia połączenia internetowego. Należy spróbować wyłączyć i ponownie włączyć router.

CLOSE

Częste rozłączanie połączenia internetowego.

Należy sprawdzić, czy wszystkie inne urządzenia podłączone do linii telefonicznej poprzedzone są filtrem ADSL.

(3) Problemy z siecią LAN

Komputer nie może się podłączyć do sieci.

Należy sprawdzić połączenie kabla ethernetowego pomiędzy komputerem a routerem. Należy sprawdzić ustawienia **Połączenia lokalnego** w komputerze.

Specyfikacja produktu może ulec zmianie bez powiadomienia.

"Niniejszym firma Lechpol oświadcza, że urządzenie ML0512 jest zgodne z zasadniczymi wymaganiami oraz innymi stosownymi postanowieniami dyrektywy 1999/5/WE. Właściwa deklaracja do pobrania na stronie www.lechpol.eu"

Poland



Prawidłowe usuwanie produktu (zużyty sprzęt elektryczny i elektroniczny)

Oznaczenie umieszczone na produkcie lub w odnoszących się do niego tekstach wskazuje, że po upływie okresu użytkowania, nie należy usuwać go z innymi odpadami pochodzącymi z gospodarstw domowych. Aby uniknąć szkodliwego wpływu na środowisko naturalne i zdrowie ludzi wskutek niekontrolowanego usuwania odpadów, prosimy o oddzielenie produktu od innego typu odpadów oraz odpowiedzialny recykling w celu promowania ponownego użycia zasobów materialnych jako stałej praktyki.

W celu uzyskania informacji na temat miejsca i sposobu bezpiecznego dla środowiska recyklingu tego produktu, użytkownicy w gospodarstwach domowych powinni skontaktować się z punktem sprzedaży detalicznej, w którym dokonali zakupu produktu, lub z organem władz lokalnych.

Użytkownicy w firmach powinni skontaktować się ze swoim dostawcą i sprawdzić warunki umowy zakupu. Produktu nie należy usuwać razem z innymi odpadami komercyjnymi.

Wyprodukowano w CHRL dla LECHPOL Zbigniew Leszek, Miętne ul. Garwolińska 1, 08-400 Garwolin.







mobile accessories

www.m-life.pl